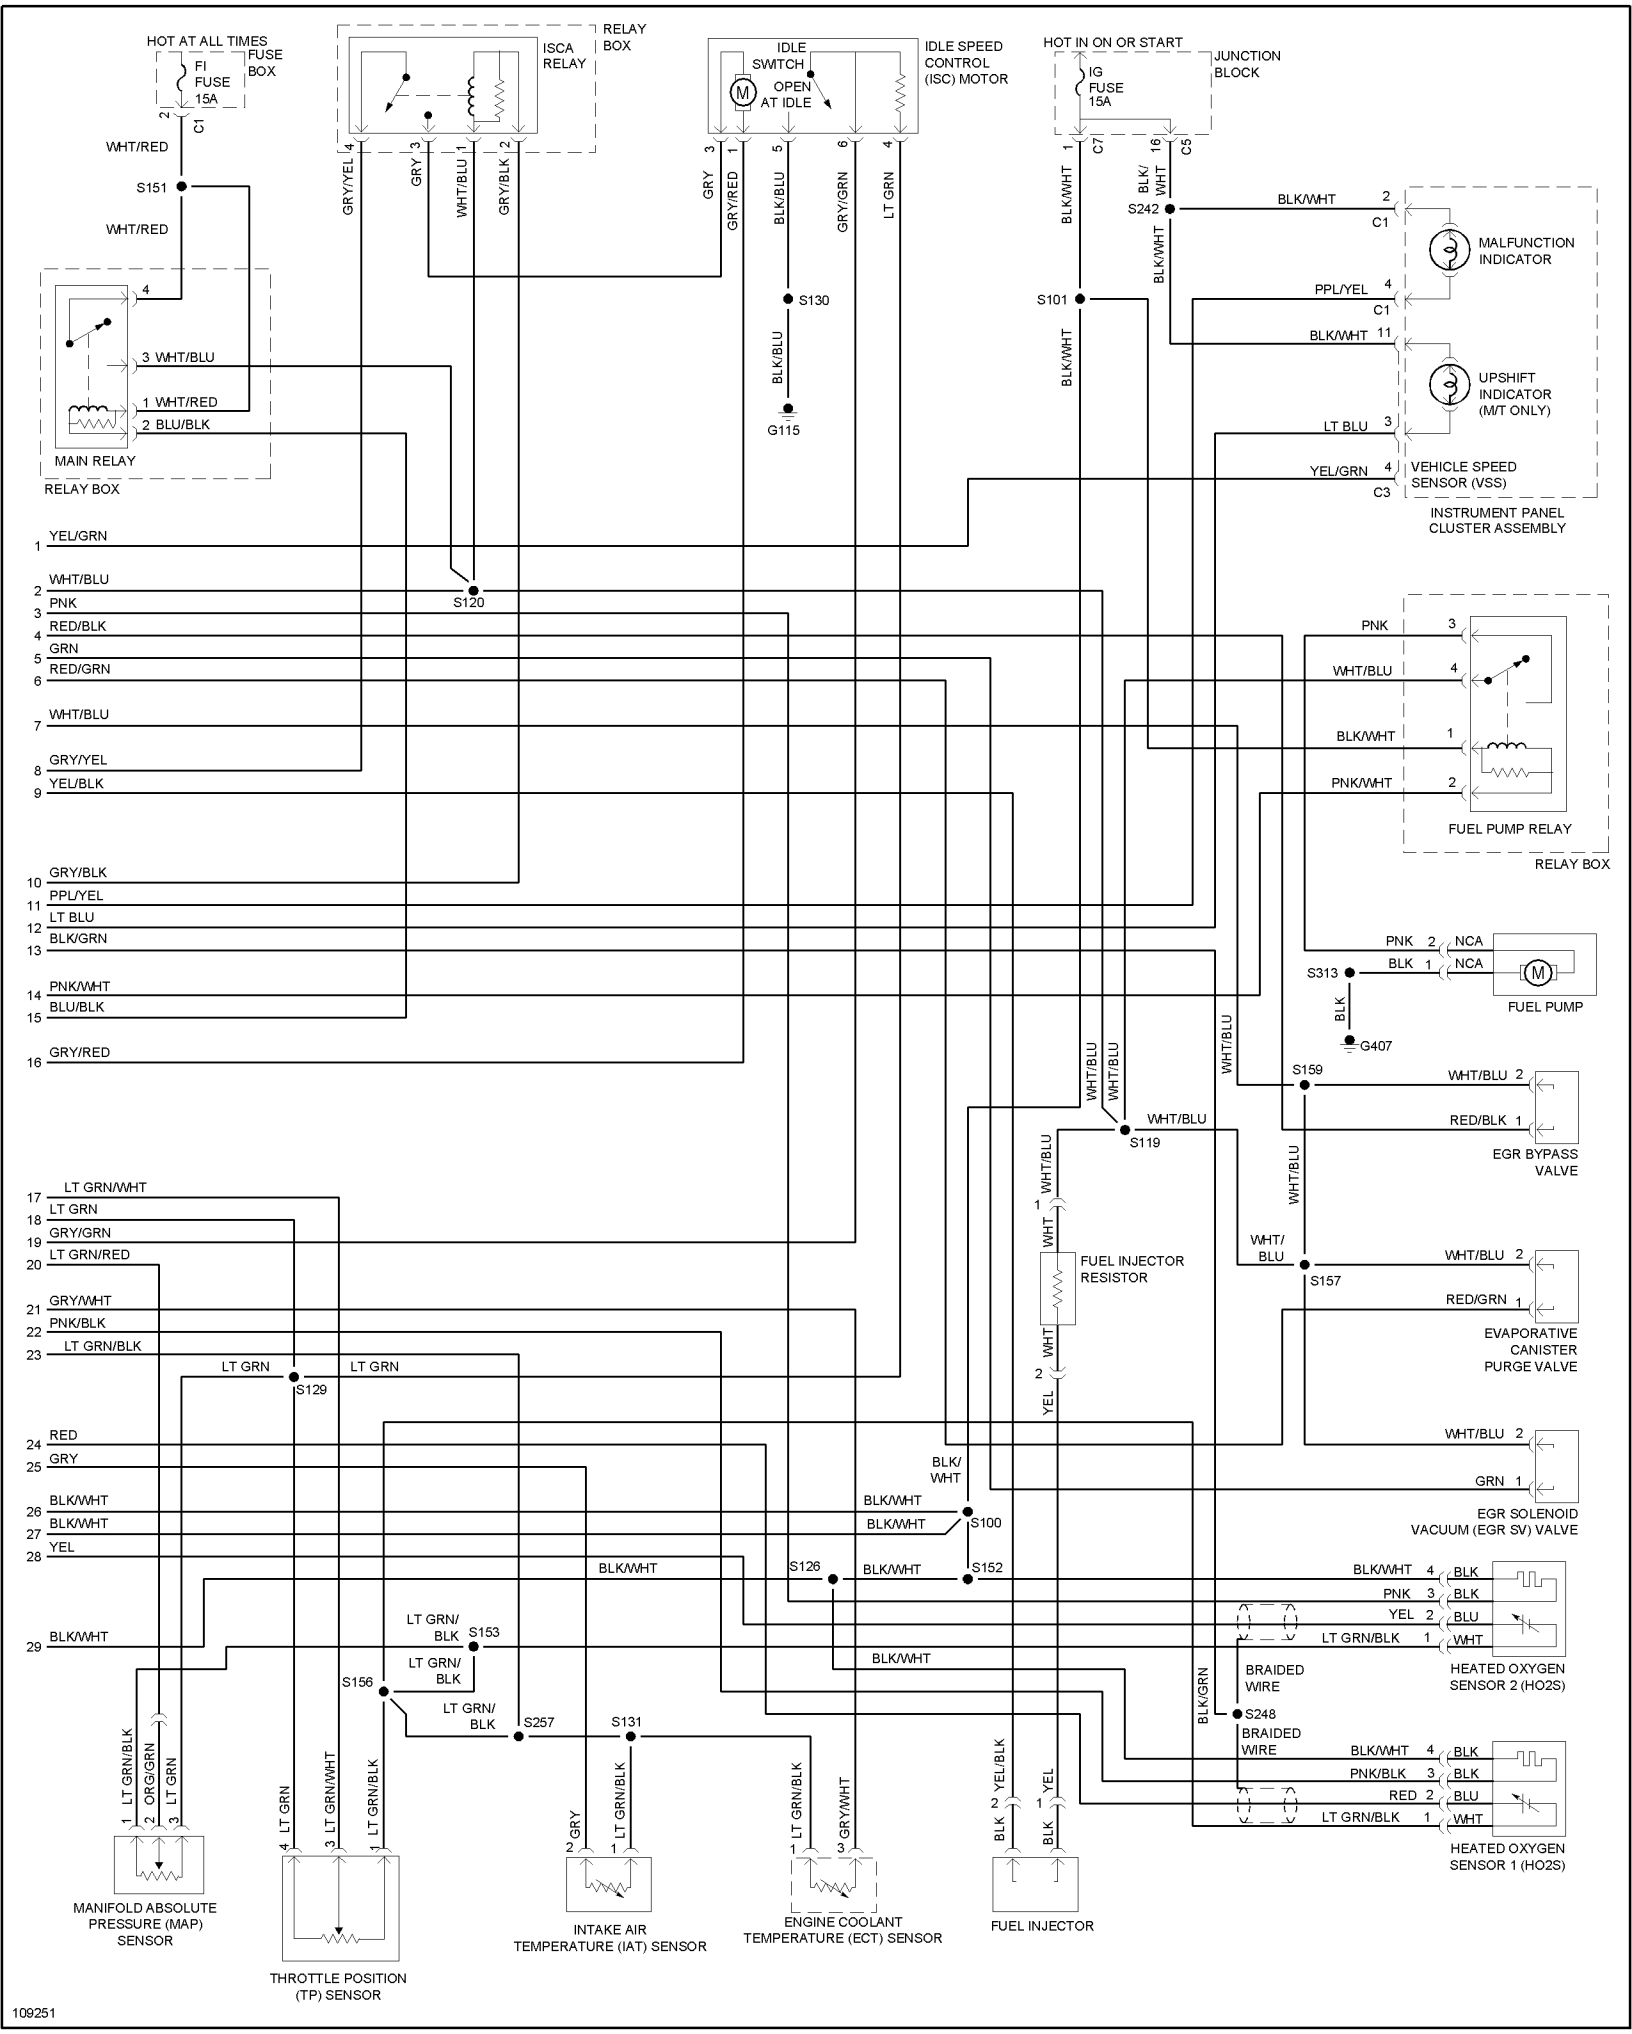
HOT AT ALL TIMES
FI FUSE 15A
FUSE BOX
C1
WHT/RED
S151
WHT/RED
MAIN RELAY
RELAY BOX
ISCA RELAY
RELAY BOX
GRY/YEL
GRY
WHT/BLU
GRY/BLK
IDLE SWITCH
OPEN AT IDLE
IDLE SPEED CONTROL (ISC) MOTOR
GRY
GRY/RED
BLK/BLU
GRY/GRN
LT GRN
S130
BLK/BLU
G115
HOT IN ON OR START
IG FUSE 15A
JUNCTION BLOCK
C7
C5
BLK/WHT
BLK/WHT
S242
BLK/WHT
S101
BLK/WHT
MALFUNCTION INDICATOR
PPL/YEL
BLK/WHT
UPSHIFT INDICATOR (M/T ONLY)
LT BLU
YEL/GRN
VEHICLE SPEED SENSOR (VSS)
C1
C3
INSTRUMENT PANEL CLUSTER ASSEMBLY
YEL/GRN
WHT/BLU
PNK
RED/BLK
GRN
RED/GRN
WHT/BLU
GRY/YEL
YEL/BLK
S120
PNK
WHT/BLU
BLK/WHT
PNK/WHT
FUEL PUMP RELAY
RELAY BOX
GRY/BLK
PPL/YEL
LT BLU
BLK/GRN
PNK/WHT
BLU/BLK
GRY/RED
PNK
BLK
NCA
NCA
S313
BLK
G407
FUEL PUMP
WHT/BLU
WHT/BLU
WHT/BLU
S159
WHT/BLU
RED/BLK
EGR BYPASS VALVE
WHT/BLU
S119
WHT/BLU
WHT
FUEL INJECTOR RESISTOR
WHT
YEL
WHT/BLU
WHT/BLU
S157
RED/GRN
EVAPORATIVE CANISTER PURGE VALVE
LT GRN/WHT
LT GRN
GRY/GRN
LT GRN/RED
GRY/WHT
PNK/BLK
LT GRN/BLK
LT GRN
S129
LT GRN
RED
GRY
BLK/WHT
BLK/WHT
YEL
BLK/WHT
BLK/WHT
S100
BLK/WHT
BLK/WHT
S126
BLK/WHT
S152
BLK/WHT
PNK
YEL
LT GRN/BLK
BLK
BLK
BLU
WHT
HEATED OXYGEN SENSOR 2 (HO2S)
BLK/WHT
LT GRN/BLK
S153
LT GRN/BLK
S156
LT GRN/BLK
S257
S131
BRAIDED WIRE
BLK/GRN
S248
BRAIDED WIRE
BLK/WHT
PNK/BLK
RED
LT GRN/BLK
BLK
BLK
BLU
WHT
HEATED OXYGEN SENSOR 1 (HO2S)
LT GRN/BLK
ORG/GRN
LT GRN
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
LT GRN
LT GRN/WHT
LT GRN/BLK
THROTTLE POSITION (TP) SENSOR
GRY
LT GRN/BLK
INTAKE AIR TEMPERATURE (IAT) SENSOR
LT GRN/BLK
GRY/WHT
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
YEL/BLK
BLK
YEL
BLK
FUEL INJECTOR
109251